


Volkano Summit Towel Hook Installation Guide

Code: V63232, V63233, V63234, V63235, V63236, V63238, V63239

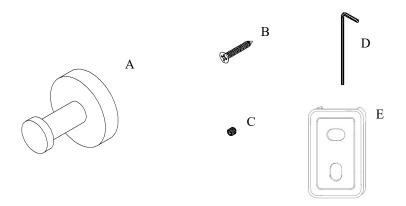



Parts Included	QTY
A - Towel Hook	1
B - Screw	2
C - Set Screw	1
D - Allen Key	1
E - Bracket	1


Model #	Description	Finish	Weight (lb)	WxHxD (mm)	WxHxD (Inches)	Metal Type
V63232	Summit Towel Hook	Matte White	0.33	43 x 43 x 44	1.69 x 1.69 x 1.71	Brass
V63233	Summit Towel Hook	Chrome	0.33	43 x 43 x 44	1.69 x 1.69 x 1.71	Brass
V63234	Summit Towel Hook	Brushed Nickel	0.33	43 x 43 x 44	1.69 x 1.69 x 1.71	Brass
V63235	Summit Towel Hook	Matte Black	0.33	43 x 43 x 44	1.69 x 1.69 x 1.71	Brass
V63236	Summit Towel Hook	Polished Nickel	0.33	43 x 43 x 44	1.69 x 1.69 x 1.71	Brass
V63238	Summit Towel Hook	PVD Brushed Gold	0.33	43 x 43 x 44	1.69 x 1.69 x 1.71	Brass
V63239	Summit Towel Hook	PVD Brushed Bronze	0.33	43 x 43 x 44	1.69 x 1.69 x 1.71	Brass

Warranty: 2 Years

Care & Maintenance: A periodic wash using warm water and a soft cloth will retain the high quality finish of your Volkano product for many years to come. ON NO ACCOUNT should any household bleaches, detergents, abrasive polishes, steel wool or other cleaning agents be used on this item.







877-757-8930 www.icobath.com